


Engine Management System

Sensor Board ver. 4.0

ExperimentalAvionics.com

2021

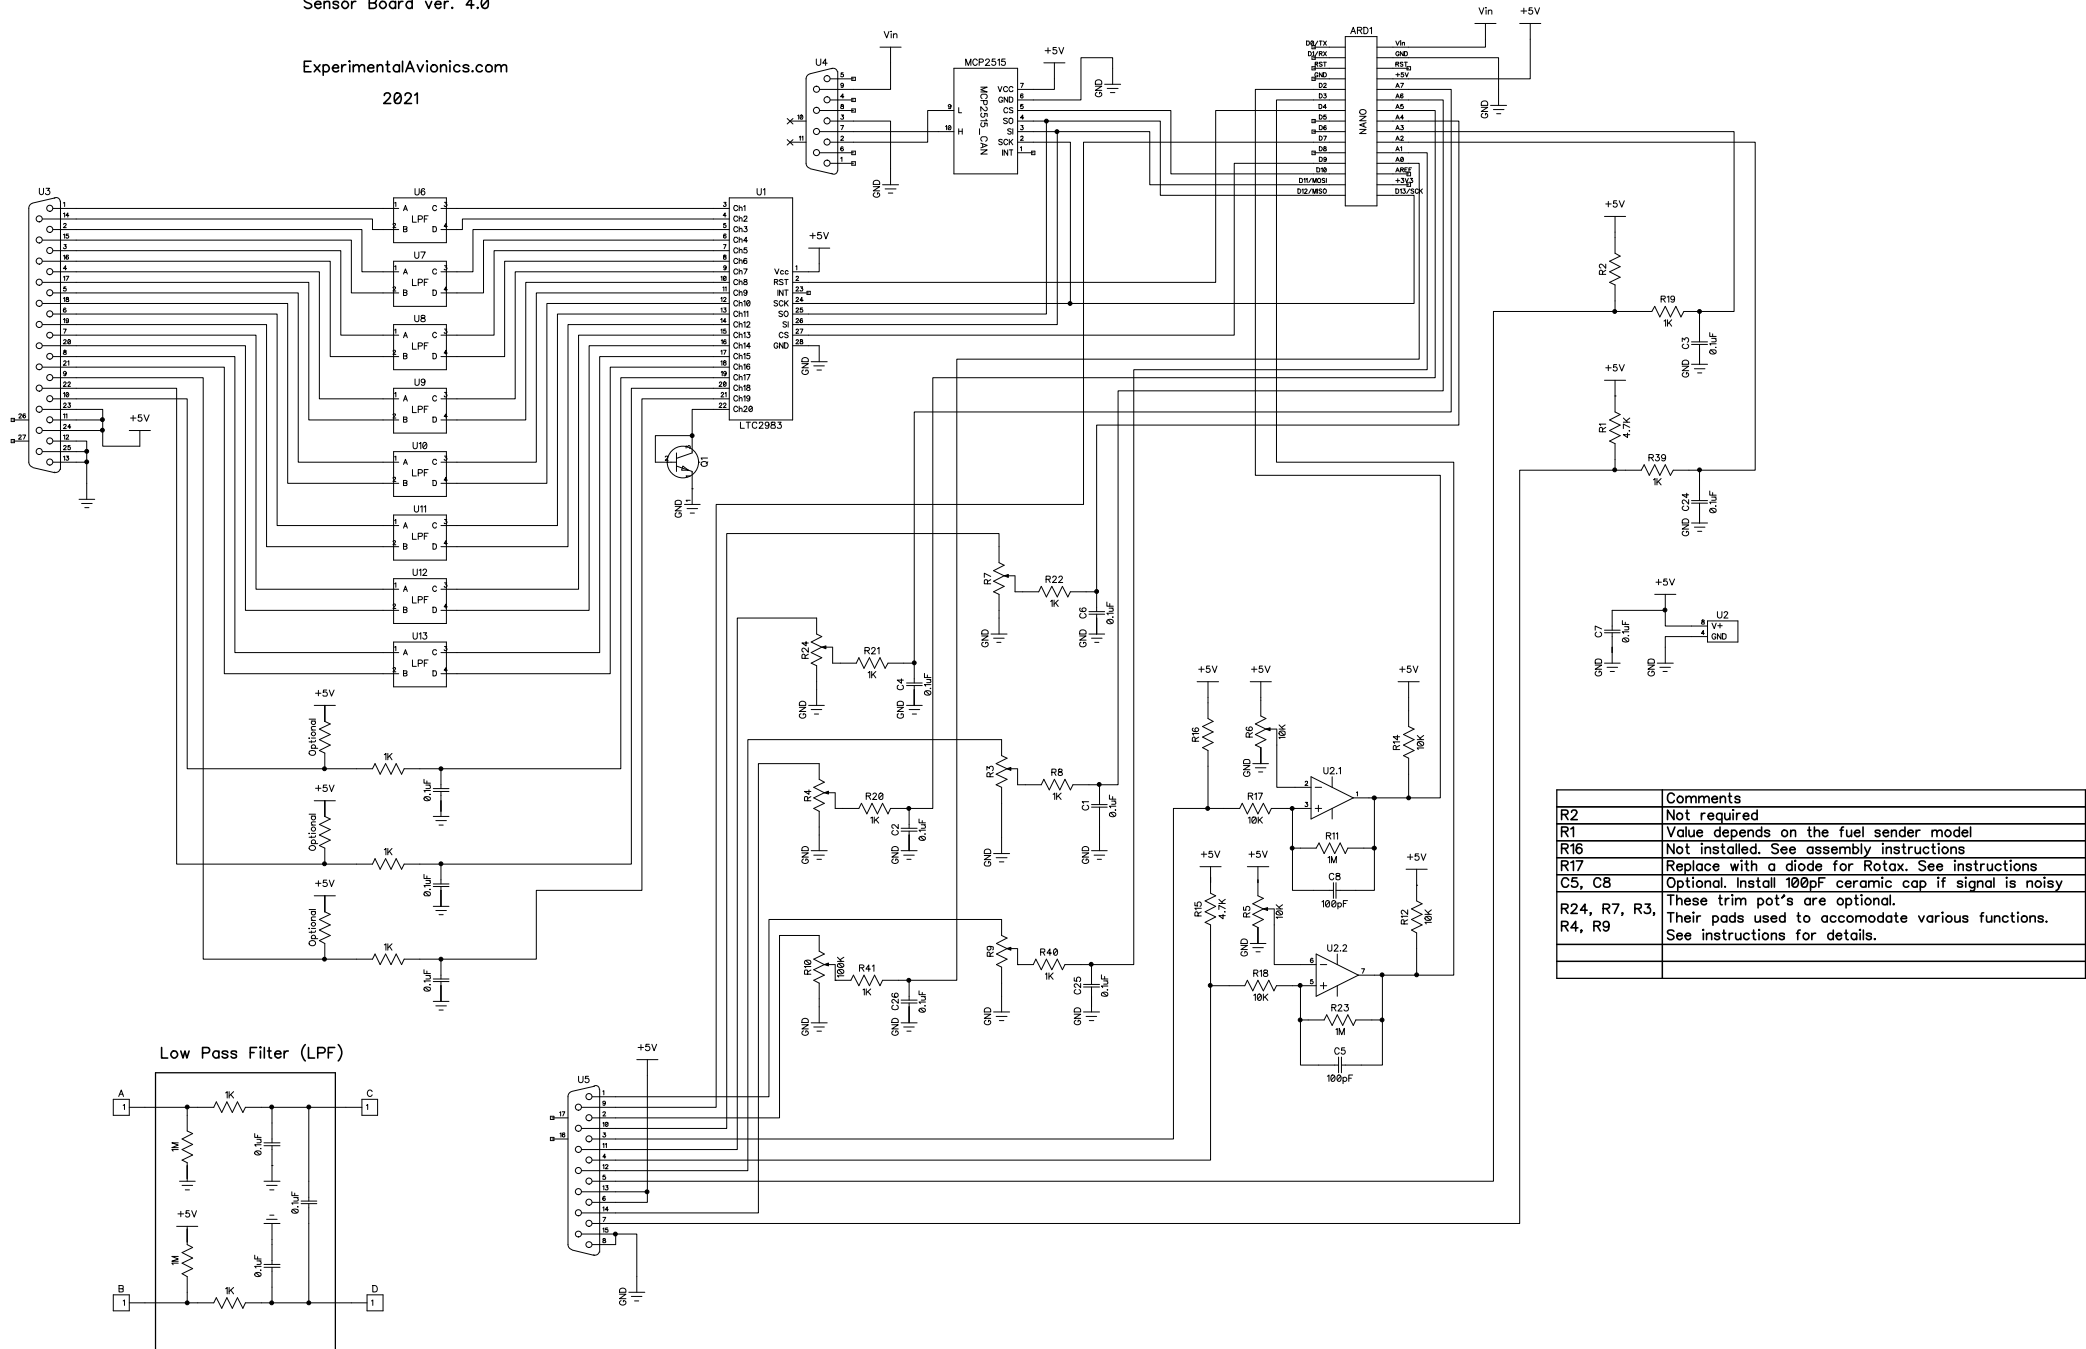

	Comments
R2	Not required
R1	Value depends on the fuel sender model
R16	Not installed. See assembly instructions
R17	Replace with a diode for Rotax. See instructions
C5, C8	Optional. Install 100pF ceramic cap if signal is noisy
R24, R7, R3, R4, R9	These trim pot's are optional. Their pads used to accomodate various functions. See instructions for details.